

# OAKWORKS® Prone Pillow



\* Patent # US D555,251 S



## WARNING

For imaging applications - generator must be below the patient and the receiver above the patient.

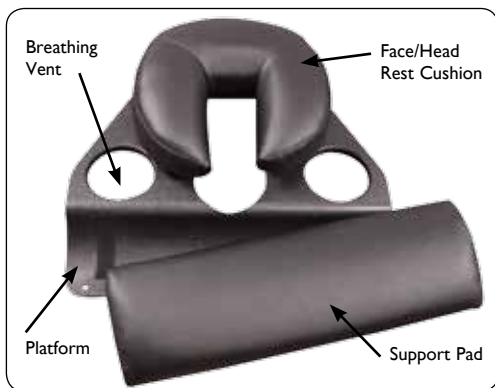 


Fig. 1



The Prone Pillow is designed to comfortably support your clients during a variety of procedures and offers excellent air flow for long prone procedures. The Prone Pillow can be used on any horizontal surface.

The unit is composed of an easily cleaned, durable polymer platform and a proprietary pad system made up of two removable, positionable pads: the Face/Head Rest Cushion and the Support Pad (see Fig.1). These pads are positioned on the platform through the use of Velcro® attachment strips that hold the pads securely in the perfect position for both comfort and procedural need, regardless of client size.

## SPECIFICATIONS

Platform:	19" x 19"
Support Pad:	3"H x 6"W x 19"L
Face/Head Rest Cushion:	11" diameter

Aluminum Equivalence (nominal) of x-ray attenuation:

Platform	.44 mm @ 100 kVp & HVL of 3.6mm
Support Pad	.86 mm @ 100 kVp & HVL of 3.6mm
Face/Head Rest Cushion	.72 mm @ 100 kVp & HVL of 3.6mm

# OAKWORKS®

Phone: 717.235.6807 FAX: 717.235.6798 [www.oakworks.com](http://www.oakworks.com)  
923 East Wellspring Rd. New Freedom, PA 17349 USA

# INSTRUCTIONS FOR USE | Oakworks Prone Pillow

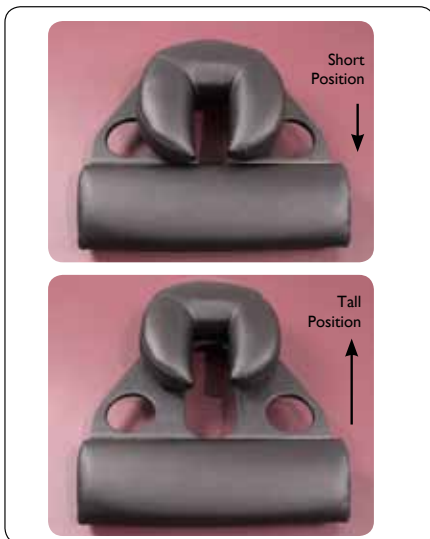 


Fig. 2



Fig. 3



Fig. 5



Fig. 5a



Fig. 5b

## • Prone Positioning

The Face/Head Rest Cushion can be positioned anywhere along the length of the large center vent to accommodate clients of different heights (see Fig 2). The width of the cushion's open end can be adjusted before placing on the platform to fit different sized faces (see Fig 2a). Adjust the Face/Head Rest Cushion placement for comfortable support by positioning it along the Velcro® strips so that the head/face and shoulders are equally supported (see Fig 2b).



Fig. 2a



Fig. 2b

## • Supine Positioning

The Face/Head Rest Cushion can be used to facilitate comfort and support when the client is lying in a supine position. Turn the cushion around on the platform so that the open end points away from the client. This angle provides cervical support to the client when in a supine position. (see Fig 3)

▶ **NOTE:** The Prone Pillow should always be set high enough so that there is sufficient air flow. (see Fig 4) When using the Prone Pillow on soft surfaces for prone positioning, it is important to insure the air flow not be restricted in any way and that the client can breathe freely. When using the platform on a soft horizontal surface – such as a bed – it is recommended that a firm, flat surface/object be placed under the platform to lift it above the padding and allow good air flow to the client.

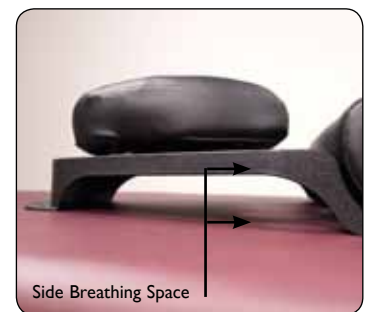 


Fig. 4

## • Cleaning the Prone Pillow

**PADS:** Clean the upholstered portion of the Prone Pillow with a mild detergent solution. A diluted 1/100 bleach solution can be used for disinfecting. Dry the unit immediately after cleaning to remove any excess cleaning solution. Use of strong cleaners such as alcohol, acetone or other products that contain high concentrations of these substances, can shorten the life of your upholstery, or discolor it.

▶ **NOTE:** Damage caused by any cleaning products will not be covered under the warranty.

**PLATFORM:** Use only a mild solution of 4:1 diluted non-alcohol cleaner such as 409®, Fantastik® or some other non-abrasive cleaner to wipe down the polymer platform. Apply with a damp (not wet) lint-free cloth.

## • Accessories

**Disposable Face/Head Rest Covers:** a disposable sanitary covering perfectly sized to do a superb job of making your clients more comfortable while also protecting the Prone Pillow. Choose from fitted (Fig.5) or Flat (Fig. 5a)

**Flannel Face/Head Rest Covers:** machine-washable, unbleached 100% cotton flannel cover fits securely with elastic and provides added comfortable protection. (Fig.5b)