
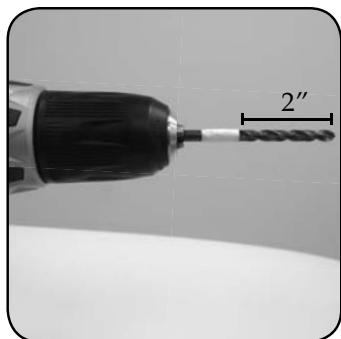


OAKWORKS® PowerLine & Seychelle

PAPER ROLL HOLDER INSTALLATION


Items required: 7/32" Dia. standard drill bit
Hand drill
Masking tape
Ruler
5/32" or 4mm Hex Key Wrench

Part #61624 – Oakworks Paper Roll Holder Kit

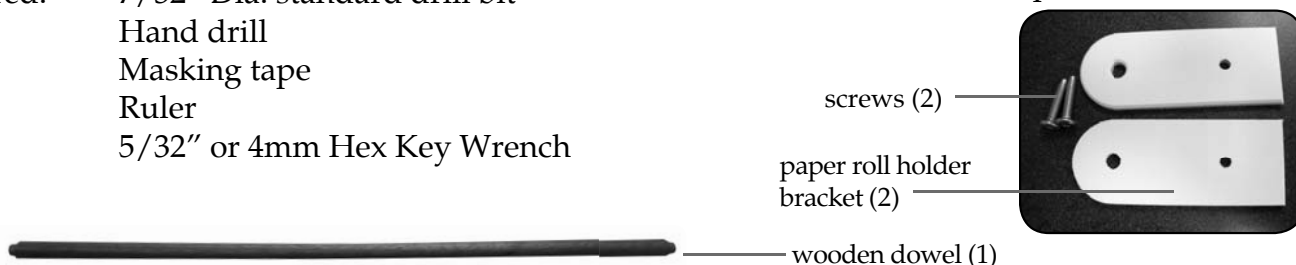

Step 1

Use masking tape to mark 2" drilling depth.

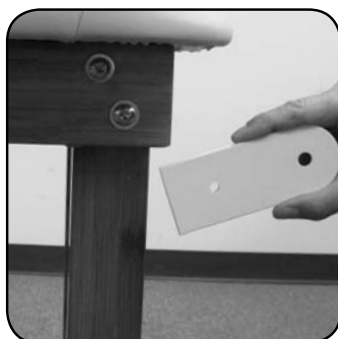

Step 2

After table is set-up, select position for first bracket to be installed on the outside of table leg on foot end of table.




Step 3

Slide bracket along bottom edge of table side frame until it meets with the existing bolt head. Ensure the dowel rod seat on the bracket is facing inwards.



Step 4

Holding the bracket firmly, drill the bracket mounting hole until the masking tape reaches the bracket.

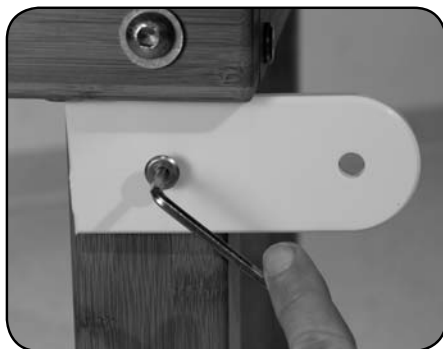

Step 5

Using the supplied screw & your hex key wrench, secure the paper roll holder bracket into place. Repeat steps 3 thru 5 on the other side of table.



Step 6

Locate the wooden dowel & feed it thru your paper roll. Place one end of the wooden dowel in the hole located in the paper roll holder bracket.



Step 7

To secure the wooden dowel on the other side, pull out the paper roll holder bracket slightly & insert the wooden dowel into the hole.